



Where Technology & Creativity Meet



2.1 Indoor/Outdoor Passive Hi-Fi Bluetooth Speaker with 6" Subwoofer

**INSTRUCTION
MANUAL**

Introduction

For correct operation, please read this manual carefully before use. Any content revisions of the manual will not be declared, and we are not responsible for consequence caused by fault or oversight of this manual.



Features:

- 2.1 CH Indoor/Outdoor Active Hi-Fi Bluetooth Speaker with 6-inch (152.4mm) subwoofer.
- Output has very clear sound, heavy bass, and dynamic sound effects.
- With A2DP Bluetooth, wirelessly stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad.
- Secure simple pairing for user-friendly operating.
- 32 ft (10 meters) operating range.
- With USB and SD/MMC card support.
- With FM radio.
- With 2 Microphone inputs.
- With Auxiliary Line-in (AUX-IN) function, suitable for PC, MID, TV, and other audio devices.
- Side panel with LED screen, and controls for volume/bass, as well as controls for microphone volume/echo.
- With built-in lithium rechargeable battery (1800mAh).
- With handle for easy portability.

Specifications:

Product size: 8.85" (225mm) diameter x 12.2" (310mm) length

Horn Size: 3-inch (76.2mm)

Subwoofer Size: 6-inch (152.4mm)

Horn output: 3W x2, 4Ω

Subwoofer output: 15W, 4Ω

Battery Capacity: 1800mAh

Frequency Response: 100-20Khz

Power supply: DC5V 1A


USB and SD/MMC card support: 32GB maximum

Accessories:

Charging Cable, Auxiliary Audio Line Cable, Wired Microphone*, User Manual.

*(note: Wired Microphone is optional, please refer to the accessories included)

Appearance of control panel:

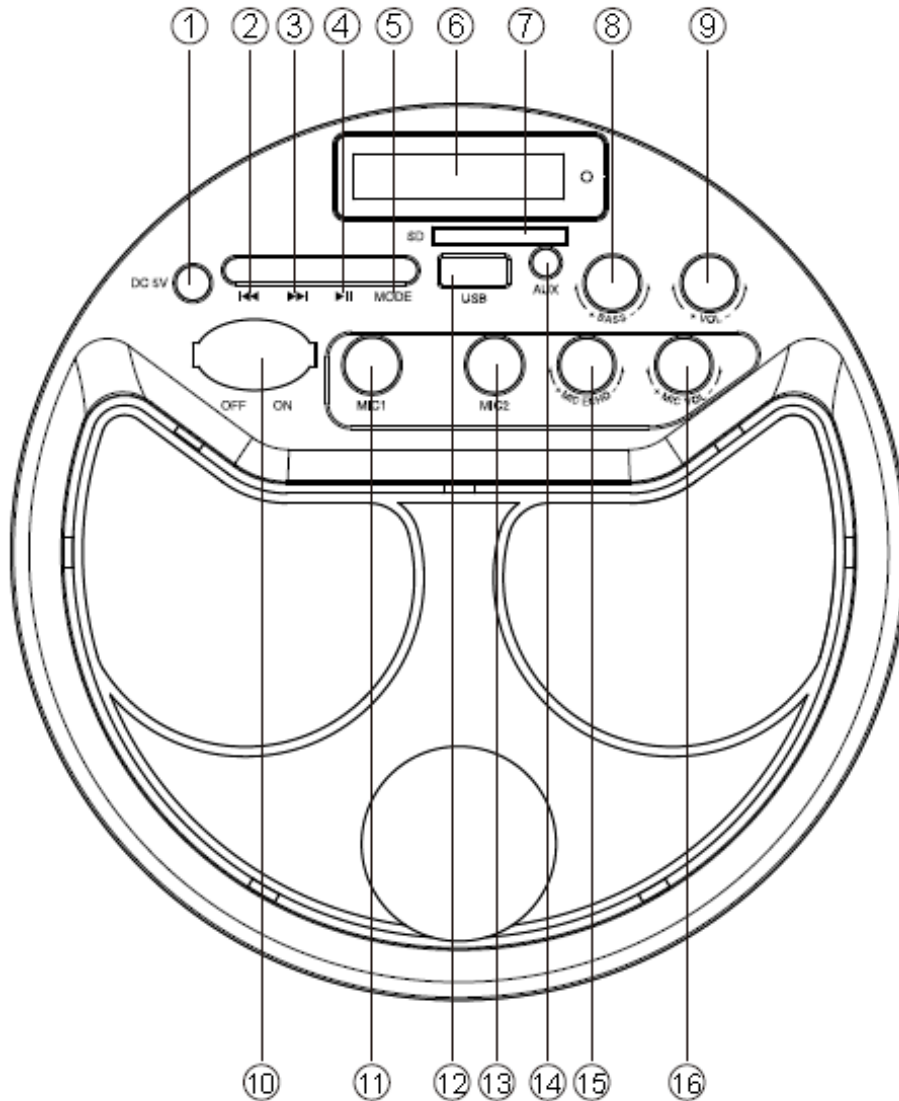

- | | |
|---|------------------------------------|
| 1. Charging jack | 8. Bass control knob |
| 2. PREVIOUS/Backward | 9. Volume control knob |
| 3. NEXT/Forward | 10. ON/OFF switch |
| 4. PLAY/PAUSE | 11. Microphone input 1 |
| 5. MODE (Switch between Bluetooth, USB drive, SD/MMC card, FM and AUX-IN modes) | 12. USB port |
| 6. LED display | 13. Microphone input 2 |
| 7. SD/MMC card slot | 14. AUX-IN jack |
| | 15. Microphone Echo control knob |
| | 16. Microphone Volume control knob |

Playing Music:

1. Turn the Power switch to "ON"
2. Insert SD/MMC card or USB drive - the audio files will play automatically.
3. In playing mode, tap the PREVIOUS or NEXT buttons to select tracks you like.
4. Turn the Volume knob to adjust the volume up or down.
5. Turn the Bass knob to adjust the bass volume up or down.
6. Press PLAY/PAUSE to play or pause.
7. For other compatible music player devices, or MP3/MP4 players, please use the supplied auxiliary audio line cable to connect from your external device's "LINE OUT" jack to the "AUX-IN" jack of this unit. When using an external device, all functions will be controlled by the external device.
8. Please turn the Power switch to "OFF" while without use.

Using the Bluetooth Function:

1. Turn the power switch to "ON". The LED screen will display "bt" (flashing) and the unit will beep twice.
2. Activate *Bluetooth* on your mobile device and search for device name "SPBT1034", then connect to it. The "bt" on the screen will stop flashing, and the unit will beep three times, once connected successfully.
3. Play the tracks from your mobile device and enjoy.
4. Tap the PREVIOUS or NEXT buttons on this unit, or on your mobile device, to select the tracks you wish to listen to.
5. Press the PLAY/PAUSE button on this unit, or on your mobile device, to play/stop the music.
6. Use the Volume control knob to adjust the volume up or down. Or adjust the volume via your mobile device.
7. Use the Bass control knob to adjust the bass up or down.

Use FM Radio:

1. In FM Radio mode, the included auxiliary audio cable also acts as an antenna. Please insert the cable into the AUX-IN jack to get the best FM signal before use.
2. Turn the power switch to "ON" without any SD/MMC or USB drive inserted. Then press the "MODE" button to switch to FM. (The mode sequences, in order, are Bluetooth, SD, USB, FM and AUX-IN)
3. In playing mode, tap the PLAY/PAUSE button to auto search for an FM channel and store it automatically.
4. Press the PREVIOUS or NEXT button to change the stored FM channel.

Auxiliary Line-In (AUX-IN):

For other compatible music player devices, or MP3/MP4 players, please use the supplied auxiliary audio line cable to connect from your external device's "LINE OUT" jack to the "AUX-IN" jack of this unit. Then press the "MODE" button to switch to the AUX-IN mode. Enjoy!

While using an external device, all functions will be controlled by the external device except for the PLAY/PAUSE button.

Using Microphones:

This product comes with two microphone inputs. Just plug the 6.5mm microphone into either one of the microphone inputs.

The Microphone Volume and Microphone Echo can be adjusted by the “MIC-VOL” and “MIC-ECHO” knobs.

(Please note that a microphone cannot be used while in FM radio mode)

Charging Instructions:

1. Power off the unit, insert the provided charge cable into the charging jack of the unit, and then connect the other end of the charge cable to a PC or other charger with 5V/1A output (not included). The charging indicator, which is next to the LED screen, will remain lit until charging is complete.
2. Charging time should be 5-6 hours. When the unit is fully charged, the indicator light will switch off.
3. In order to prolong the battery life, please do not charge for more than 8 hours.

Axess Products Corporation

6639 Valjean Ave., Van Nuys, CA 91406, USA

Tel: 818-785-4000 • Fax: 818-785-5081 • email: info@axessusa.com

Questions? Comments? Please Contact us at support@axessusa.com

©2015 Axess Products Corporation. All rights reserved.