

Axess BT Portable Speaker

SPBT1039 USER GUIDE



For correctly operating , please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by fault or oversight of this manual.

FEATURES:

1. 2.1 outdoor Passive Bluetooth Speaker with 4 inch subwoofer & vibrating disk
2. Output very clear sound and heavy bass, dynamic sound effect
3. With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
4. Secure simple pairing for user-friendly operating
5. 10 meters operating range
6. With Micro SD card supporting;
7. With FM radio
8. With Line-in function, suitable for PC, MID, TV and other audio device.
9. Built-in lithium rechargeable battery 1800mAh
10. With breathing LED inside.
11. With strap, easy to take out.

SPECIFICATION:

Horn Size: 2 inch

Subwoofer Size: 4 inch

Horn output: 2W*2, 4Ω


Subwoofer output: 7W, 4Ω

Battery Capacity: 1800mAh

Frequency Response: 100-20Khz

1

INSTRUCTION FOR APPEARANCE AND KEY:

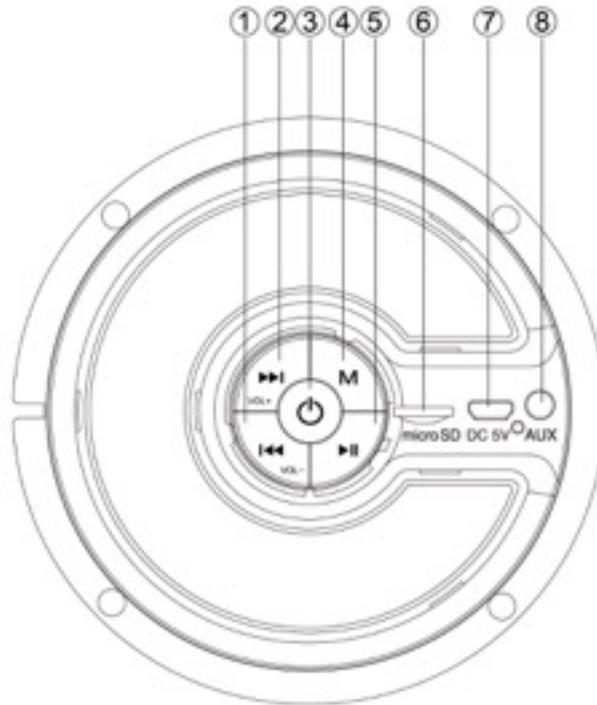

- | | |
|---|------------------|
| 1. Backward | 5. Play/Pause |
| 2. Forward | 6. Micro SD |
| 3. On/Off button | 7. Charging jack |
| 4. Mode(Switch Bluetooth,
Micro SD,FM
and AUX-IN state) | 8. Aux-in jack |

Bluetooth:

1. Turn the power button to "ON", The LED light turn blue and twinkle quickly and beep twice.
2. Activate *Bluetooth* of mobile phone and search for device name "Axess SPBT1039" then connect it. The blue LED light twinkle slowly and and beep third times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press Forward or Backward button on the devices or on Mobile phones to select songs you like.
5. Press Play/pause button on the devices or on Mobile phones to play/stop the music
6. Use the bluetooth device to adjust volume up and down. Or long press to Forward or Backward button to adjust volume up and down²

Playing music from Micro SD card:

1. Turn the Power button to "ON".
2. Insert Micro SD card into slot, the music stored will be played automatically and blue LED light always keep lighting.
3. Under playing mode, short press Forward or Backward button to select songs you like, long press to Forward or Backward button to adjust volume up and down.
4. Press PLAY/PAUSE to play or pause.
5. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert Micro SD card will disconnect the Bluetooth and switch the playing from Micro SD card. You can press the MODE button to switch to Bluetooth mode again.

FM Radio:

1. Under FM radio state, the audio cable provided treat as antenna. Please Insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button to switch to FM radio state.
3. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
4. Press Forward or Backward button to change the stored FM channel.

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this devices. Then press the "MODE" button to switch to AUX-IN state. Enjoy...

When using an external device, all functions will be controlled by the external device except the "Play/pause" button.

Remarks:

1. Press the MODE button to switch the different modes, the order is Bluetooth, Micro SD card, FM radio and AUX-IN.
2. Turn the power button to "off" to cut off the power supply while without use.

How to charge:

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output (Not included),the red charging indicator keep lighting.
2. Charge time should be 3-5 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.



Axess Products Corporation
6639 Valjean Ave., Van Nuys, CA 91406,
USA Tel: 818-785-4000 • Fax: 818-785-5081
email: info@axessusa.com Questions? Comments?
Please Contact us at support@axessusa.com